


784G, 784G3, 784G5 (Low Profile) Lites

For 1 3/4" Door, & 3/16", 1/4", or 5/16" Glass

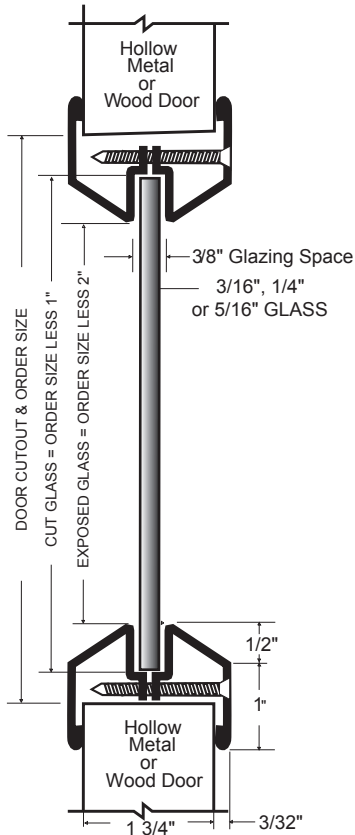

Installation Instructions



Installation Instructions

1. Cut out door in accordance with door manufacturer's listing procedure. Steel fire-rated doors do NOT require an opening reinforcing channel or reinforcing clips.
 2. Install glass & glazing material (sold separately), into lite kit.
 3. Position outer frame in-door cut-out.
 4. Position inner frame and insert start all screws before fully tightening.
 5. Tighten screws using a crisscross pattern. Use caution when using power screw-driving equipment to avoid stripping the material.
- ① **FIELD PAINTING:** For best results, scuff with a Scotch-brite pad prior to painting.

Customer Service

1-877-671-7011

us.allegion.com



© Allegion 2016
111370 Rev. 9/16-a